


4

3

2


1

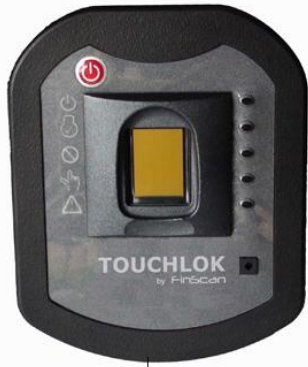

Programming Remote



Valet Remote

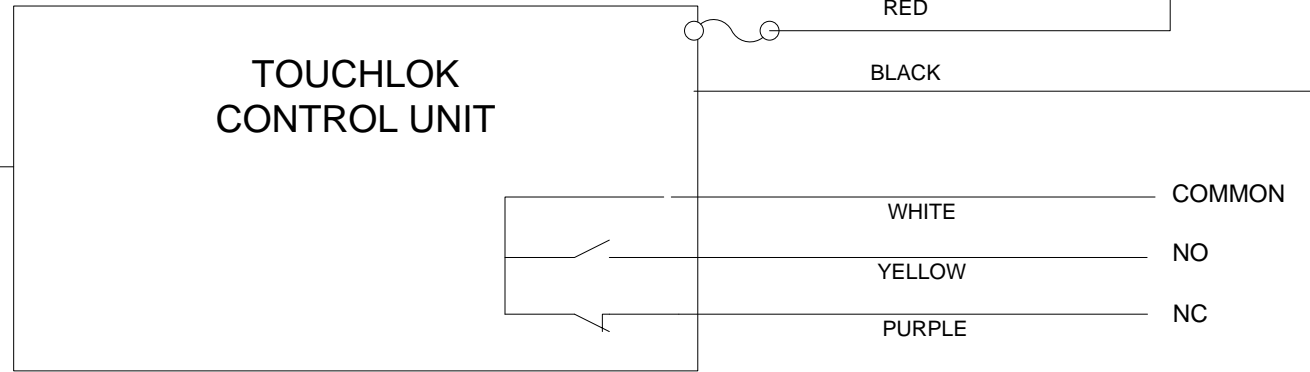

NOTES :

1. Programming Remote adds and removes user fingerprints from TOUCHLOK.
2. Valet remote only enables TOUCHLOK.
3. TOUCHLOK can operate in two modes, PULSE and TOGGLE.
4. TOGGLE MODE – Present valid finger, Relay is energised. Present finger again, Relay is de-energised.
5. PULSE MODE – Present finger, Relay is energised for 1 to 5 seconds, then de-energised.
6. RED Battery + wire is fused in TOUCHLOK control unit.
7. Whilst in a De-energised state for 5 minutes, TOUCHLOK will enter sleep mode to conserve battery power. To wake , the Power ON button is pressed.

		TOUCHLOK wiring diagram			
		SIZE A4	FSCM NO	DWG NO TOUCHLOK1	REV 1.0
SCALE		1:1	13 / 12 /2010	SHEET	1 OF 1

4

3

2

1